



Installing a New TermCap

Use the **F1** button on any page of a ThinManager wizard to launch Help for that page.


Visit www.thinmanager.com/TechNotes4/01_Intro/Manuals.shtml to download the manual, manual chapters, or the abridged ThinManual.

ThinManager has a **Terminal Capability Database** (termcap.db) that provides ThinManager with the configuration parameters for each thin client model. At each terminal connection, the TermCap database is checked and an integrity check is performed. If the configuration does not match the terminal specifications, ThinManager may reconfigure the terminal to acceptable parameters.

As ACP Hardware partners release new ThinManager Ready thin clients, ACP will update the TermCap database to include the new units. When a new model of hardware is purchased the TermCap may need to be updated to the latest version from <http://www.thinmanager.com/support/downloads.shtml#termcap>.

Install New TermCap Database

Select **Install > TermCap Database** from the ThinManager menu in ThinManager or **Manage > Install New TermCap Database** in versions before ThinManager 3.1 to launch a file browser.

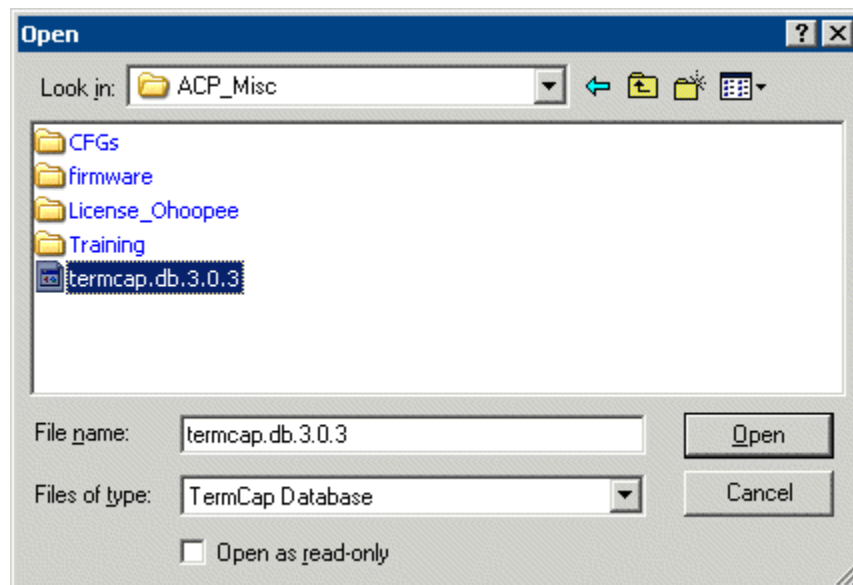

Install New TermCap Database

An **Open** dialog box will be launched. Select the new version of the **termcap.db** and select the **Open** button. This will install the new version.

The new version will take effect as soon as it is installed.

Note: You may need to also install new firmware if you are adding new hardware. See the Install New Firmware Tech Note for details.