



Setup Overview

Use the **F1** button on any page of a ThinManager wizard to launch Help for that page.

Visit www.thinmanager.com/TechNotes4/01_Intro/Manuals.shtml to download the manual, manual chapters, or the abridged ThinManual.

All you need to know about ThinManager (in 100* words or less)

Terminal Server

- Build a terminal server with the Microsoft Windows 2003/2008 Server operating system. Enable Terminal Services.
- Create a Microsoft Licensing Server and add a TS CAL (Terminal Server Client Access License) or RDS CAL (Remote Desktop Services Client Access License) for each thin client. They also require a normal CAL.
- Create a Microsoft user profile for each terminal on the terminal server. Make sure that the user is a member of the Remote Desktop Users Windows group.
- Apply appropriate security to each user profile using the standard Microsoft techniques.

ThinManager Server

- Install ACP ThinManager software onto a computer to create a ThinManager Server.
- Create a Master License, add a Product License for each ThinManager Ready thin client, activate, and install on the ThinManager Server.

ThinManager Ready Thin Clients

- Establish the IP addressing scheme for the thin clients, Static IP or DHCP.
- If using DHCP, configure Option 066 to list the IP address of the ThinManager Server.
- Attach the terminals to ThinManager by either:
 - Turning on the terminal and selecting the "Create New Terminal" option when the offline terminals are listed.
 - Pre-creating the terminals in ThinManager and selecting the proper terminal name when the terminal is turned on and offline terminals are listed.
- The clients will connect to the ThinManager Server and download the firmware and configuration. The configuration will send them to the terminal server to login and start a session.

Note: Visit www.thinmanager.com/TechNotes4/01_Intro/Manuals.shtml to download the manual, manual chapters, or the abridged ThinManual for full details on these steps.

* Closer to 300