



ThinManager License Activation Without Internet Access

Use the **F1** button on any page of a ThinManager wizard to launch Help for that page.

Visit www.thinmanager.com/TechNotes4/01_Intro/Manuals.shtml to download the manual, manual chapters, or the abridged ThinManual.

ThinManager licenses are activated on the Internet from the ACP License Site linked from the ThinManager site at www.thinmanager.com.

If the computer that ThinManager is installed on lacks Internet access, the licenses can be activated on a computer that has does have Internet access and then the license can be transferred to the ThinManager Server.

Activation Steps:

1. Write down the Install ID of the computer that will be the ThinManager Server.
This is found on the Licensing Window by selecting Install>License on the ThinManager menu.
2. Write down the license number to be activated.
This is usually found inside the ThinManager CD case.
3. Go to a computer with Internet access.
4. Go to the ACP License Site from the ThinManager site at www.thinmanager.com .
5. Login or create a user account and login.
6. Select the Activate License link.
7. Enter the License Number and Install ID from step 1 and step 2.
8. Save the license to a convenient place.
9. Transfer the license to the ThinManager Server, using a USB drive, floppy, burned CD, or over the network.

Note: Redundant ThinManager licenses and Mirrored ThinManager licenses require the Install IDs from a pair of ThinManager Server. Using Automatic Synchronization will display the Install IDs of both ThinManager Servers in the Licensing window.
