

Sending Messages

Use the **F1** button on any page of a ThinManager wizard to launch Help for that page.

Visit <u>www.thinmanager.com/TechNotes/Intro/Manuals.shtml</u> to download the full Manual or the ThinManual.

Messages can be sent from ThinManager to sessions on terminals.

To send a message In ThinManager:

- 1) Highlight the terminal server that the session is on.
- 2) Select the User tab of the Detail pane.
- 3) Highlight the user.
- 4) Right click and select Send Message.

📴 ThinManager		
Edit Manage Install Tools View Re	moteView Help	
Gold	Config Properties Schedule Users Sessions Processes Graph Ev	vent Log Connect Report
⊡*🏋 Gold	User Session Se	ssion ID State
E Terminals	pburns Console	0 Active
Group1A	admin1 BDB Too#1	1 Active
庄 – 🛄 AppGroup01	Disconnect Session	
Individ01	Send Message	
🛨 🖳 Sample		
Terminal Servers		
BLACK		
For Help, press F1		

User Tab for a Terminal Server

Automation Control Products <u>www.thinmanager.com</u> Revised 04/28/2009



ThinManager	matalliau kala			_ 🗆 X
Gold	Config Properties Schedule	Users Sessions Processes	Graph Event Log Cor	nect Report
🖃 🌞 Gold	User	Session	Session ID	State
🗐 - 💻 Terminals	pburns	Console	0	Active
Group1A	admin1	RDP-Tcp#1	1	Active
🕀 🖳 AppGroup01				
🕀 🖳 Individ01				
庄 - 🚚 Sample				
📮 🖓 🧧 Terminal Servers	Enter Message to send	×		
	Terminal will be reported i	in 10 seconds		
		1110 3000103		
E → TAN	ОК	Cancel		
Application Groups				
TermSecure Users				
For Help, press F1				

Message Window

A message box will be displayed.

- 5) Type the message into the message box.
- 6) The message will be sent when the **OK** button is selected.