



Installing Firmware

Use the **F1** button on any page of a ThinManager wizard to launch Help for that page.

Visit www.thinmanager.com/TechNotes/Intro/Manuals.shtml to download the full Manual or the ThinManual.

Firmware is the operating system for ThinManager Ready thin clients. Each time a ThinManager Ready thin client boots, it connects to a ThinManager Server, downloads the firmware, and then expands it into RAM for use as an operating system.

Firmware is installed with ThinManager and with each service pack. Occasionally new firmware is released to provide support for new devices or functions.


Downloading New Firmware

ThinManager download site has firmware at <http://www.thinmanager.com/support/downloads.shtml#firmware>.

Once it is downloaded it needs to be applied to the ThinManager Server.

Installing New Firmware

Select **Install>Firmware** from the ThinManager menu in ThinManager 3.1 and 3.2 or **Manage>Install New Firmware** in previous versions to launch a file browser.

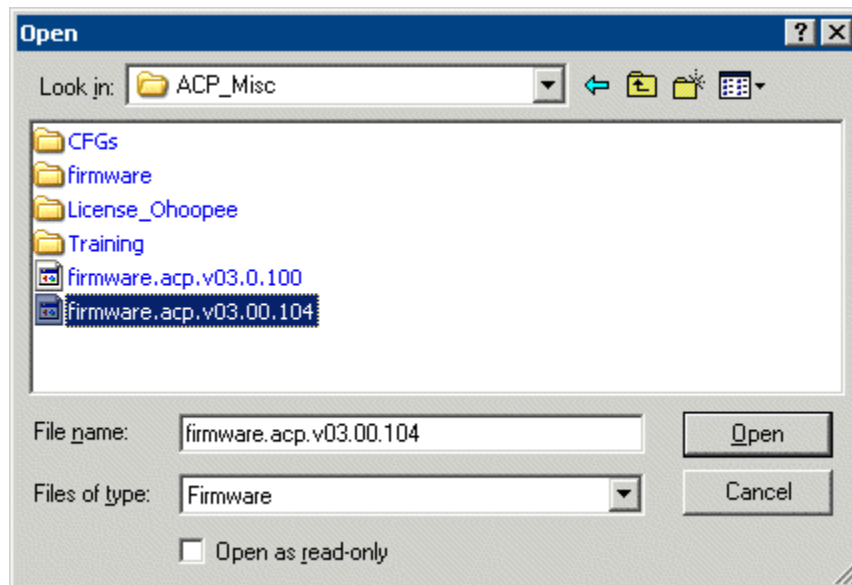

Install New Firmware

Select the new version of the **firmware.acp** and select **Open**. This will install the new version of the firmware onto the ThinManager Server.

Once the new firmware is loaded, the ThinManager Ready thin clients will load the new firmware whenever they are rebooted.