

## **Scheduling Configuration Backups**

Use the **F1** button on any page of a ThinManager wizard to launch Help for that page. Visit www.thinmanager.com/technotes/ to download the manual, manual chapters, or the ThinManual.

It is a good idea to regularly backup your ThinManager configuration. This allows you have a copy in case of emergency. It is possible to use the ThinManager Scheduling function to automatically backup your configuration.

- Open the ThinManager Server Configuration Wizard by right clicking on the green ThinMan icon at the top of the ThinManager tree and selecting *Modify*.
- Navigate to the System Schedule page and select the Edit Schedule button to launch the Event Schedule window.

Manage oba	System Schedule	Schedule	onfiguration	Wizard			Πις
Sele	ct Event Categ	jory sy	stem		•		) )n
	ent Type	Time					
	Add		Edit	Delete		ок	

## Event Schedule Window

□ Select "system" in the Select Event Category drop-down and select the Add button to launch the Schedule window.

Automation Control Products www.thinmanager.com Revised 2/16/2012



edule	_
Event Type	
Backup Configuration Database	-
Backup File I Auto Generate Filename Repeat Interval	Browse
C Unce Unly C Time In Weekly / Daily C Monthly	terval v C Yearly
Weekly Schedule Monday Tuesday Wednesday Friday Saturday Sunday	ery Day
Time 6:00 PM	÷

Schedule Window

- □ Select Backup Configuration Database in the Event Type drop-down.
- □ Select a time for backup, either a regular day or interval, and a time. A weekly after hours backup is fine.
- □ Select the *OK* button to accept the schedule.



Event Schedule				
Select Event Category	system	ystem 🔹		
Event ype	Time			
Backup Configuration Data	ibase every Friday at 06:00 PM	1		
Add	Edit Delete	е   ОК		

Scheduled Task

The task will be displayed in the *Event Schedule* window.

## **File Location**

ThinManager will create a file called as ThinManagerConfigBackup\_YYY\_MM\_DD\_hh\_dd and put it in the ThinManager folder, normally C:\Program Files\Automation Control Products\ThinManager.

If you have a synchronized pair it will put it in the folder on the master ThinServer as shown on the Synchronization tab.