
Automation Control Products

ThinManager 5.0 Help Manual



By the ACP Technical Staff

July 1, 2011

Atlanta, Georgia, USA

Contents

1	Introduction	11
1.1	Documentation Contents	11
1.2	ACP ThinManager 5.0	12
1.3	What is New in ThinManager 5.0?.....	13
1.4	Evolution of ThinManager Terminology	13
1.4.1	Essential ThinManager Functionality	13
1.4.2	The Client/Server Relationship in Terminal Services.....	13
1.4.3	Hardware Configuration Tool.....	14
1.4.4	Wizards.....	15
1.4.5	Terminal Server Groups	16
1.4.6	Application Groups	17
1.4.7	Display Servers and Display Clients	18
2	System Overview	21
2.1	Quick Start Checklist.....	21
2.2	Required Components	22
2.2.1	Windows Terminal Server Operating System	22
2.2.2	Client Communication Protocol	22
2.2.3	ThinManager Administrative Software	22
2.2.4	ThinManager Ready Thin Client Hardware	23
2.3	Connection Overview	24
2.4	Failover Overview	24
2.5	MultiSession Overview.....	26
2.6	MultiMonitor Overview	27
2.7	TermSecure Overview	27
2.8	PXE Boot Overview	27
3	Installation of ThinManager	28
3.1	Standard ThinManager Installation.....	28
3.1.1	Windows Server 2003	28
3.1.2	Windows Server 2008	37
3.2	WinTMC Installation.....	37
4	Licensing ThinManager	45
4.1	ThinManager Licensing.....	45
4.1.1	Standard Licensing.....	45
4.1.2	XLi Licensing	46
4.1.3	Master License Advantages	46
4.2	License Activation	46
4.3	Adding a Master License to ThinManager	64
4.3.1	Delete License	66
4.3.2	License Details	67
4.3.3	Install Demo Code	67

4.3.4	Show Old Licenses	68
4.4	WinTMC Licenses	68
4.5	TermSecure Licenses	68
4.6	Upgrading to ThinManager 5 from Older ThinManager versions	69
5	Redundant ThinManager Servers	71
5.1	Redundancy Overview	71
5.1.1	Redundancy Differences	72
5.2	Creating a Redundant Pair of ThinManager Servers	72
5.3	Creating Mirrored Redundancy	73
6	ThinManager Interface	75
6.1	Opening ThinManager	75
6.2	ThinManager Graphic User Interface	76
6.3	Tree Pane	77
6.4	Icons	78
6.4.1	Tree Icons	78
6.5	Details Pane	86
6.5.1	ThinManager Server Detail Tabs	86
6.5.2	Terminal Group Detail Tabs	88
6.5.3	Terminal Detail Tabs	89
6.5.4	Terminal Server Detail Tabs	90
6.5.5	Modifying a Terminal	92
6.5.6	Deleting a Terminal	93
6.5.7	Restarting a Terminal	93
6.5.8	Rebooting a Terminal	93
6.5.9	Renaming a Terminal	93
7	Menu Items	95
7.1	<u>E</u> dit	95
7.1.1	Add <u>T</u> erminal	95
7.1.2	Add Terminal <u>G</u> roup	95
7.1.3	Add ThinManager <u>S</u> erver	95
7.1.4	Remove ThinManager Server	97
7.1.5	<u>D</u> elete	97
7.1.6	<u>M</u> odify	98
7.1.7	<u>R</u> ename	98
7.1.8	<u>L</u> ock	98
7.1.9	<u>U</u> nlock	98
7.1.10	<u>F</u> ind	99
7.1.11	Find <u>N</u> ext	100
7.2	<u>M</u> anage	100
7.2.1	Thin <u>M</u> anager Server List	100
7.2.2	TermSecure <u>A</u> ccess Groups	100
7.2.3	<u>D</u> NS Configuration	101
7.2.4	<u>P</u> XE Server	101
7.2.5	<u>C</u> onfigure Default Terminal	101
7.2.6	<u>R</u> estore Configuration	102
7.2.7	<u>B</u> ackup Configuration	103
7.2.8	<u>S</u> ynchronize Configuration	103
7.2.9	<u>R</u> econnect	103
7.2.10	<u>D</u> isconnect	103
7.3	<u>I</u> nstall	104
7.3.1	<u>L</u> icenses	104

7.3.2	Modules	105
7.3.3	Reports (Installation)	106
7.3.4	Firmware.....	109
7.3.5	TermCap Database	109
7.3.6	PXE Boot Loader.....	111
7.4	Tools	111
7.4.1	Restart Terminals	111
7.4.2	Reboot Terminals	112
7.4.3	Reboot Terminal Server	112
7.4.4	Disable Terminals.....	112
7.4.5	Enable Terminals.....	114
7.4.6	Disable Terminal Server.....	114
7.4.7	Enable Terminal Server.....	114
7.4.8	Calibrate Touch Screen.....	114
7.4.9	Send Message.....	115
7.4.10	Clear Event Log.....	116
7.5	View	116
7.5.1	Status Bar.....	116
7.5.2	Show Connected Only.....	116
7.5.3	Reports (Selection).....	117
7.5.4	Print	118
7.5.5	Options	119
7.6	RemoteView.....	119
7.6.1	Interactive Shadow.....	119
7.6.2	Scaled to Window.....	120
7.6.3	Go FullScreen.....	120
7.6.4	Connect Options.....	120
7.6.5	Send Key	121
7.7	Help.....	121
7.7.1	Help Topics.....	121
7.7.2	About ThinManager.....	121
7.8	Right Click Menus in the Tree Pane	122
7.8.1	Right Click on the ThinManager Server Icon.....	122
7.8.2	Right Click on the Terminals Branch Icon	122
7.8.3	Right Click on a Terminal Group Icon	122
7.8.4	Right Click on a Terminal Icon.....	123
7.8.5	Right Click on the Display Servers Terminal Servers Branch Icon ..	123
7.8.6	Right Click on a Terminal Server Icon.....	123
7.8.7	Right Click on the VCenter Servers Branch Icon	124
7.8.8	Right Click on the Display Client Branch Icon	124
7.8.9	Right Click on a Display Client Member Icon	124
7.8.10	Right Click on the TermSecure Users Branch.....	126
7.8.11	Right Click on a TermSecure Users Group Icon	126
7.8.12	Right Click on a TermSecure Users Icon	126

8 Adding Thin Client Hardware 127

8.1	The Boot Process	127
8.2	IP Address Assignment.....	128
8.2.1	DHCP.....	128
8.2.2	Static IP	130
8.2.3	Hybrid IP Addressing.....	132
8.3	Configuring New Hardware.....	133
8.4	Create New Terminal Mode	133
8.5	Replace or Create New Terminal Mode	134
8.6	Auto-Creation of Terminals.....	134

8.6.1	Enabling AutoCreate	134
8.6.2	Configuring Default Terminal.....	136
9	Configuration Wizards	139
9.1	Introduction to Wizards	139
9.1.1	List Wizards	140
9.1.2	Configuration Wizards	140
9.2	ThinManager Server List.....	142
9.2.2	Automatic Synchronization.....	144
9.2.3	Defining ThinManager Servers for Manual Synchronization.....	148
9.2.4	Manual Synchronization	150
9.3	ThinManager Server Configuration Wizard	154
9.4	DNS Configuration	173
10	Terminal Configuration	177
10.1	Terminal Configuration Wizard	177
10.1.2	Terminals Using Individual Terminal Servers.....	186
10.1.3	Terminals Using Display Clients.....	190
10.1.4	Display Client Selection.....	191
10.1.5	Continuation of the Terminal Configuration.....	200
11	PXE Server Configuration	214
11.1	Overview	214
11.2	Thin Client Hardware Requirements.....	214
11.3	Methods of Operation	214
11.3.1	ThinManager Only Method.....	214
11.3.2	ThinManager Proxy Method	214
11.3.3	Stand-Alone DHCP Server Method.....	214
11.4	PXE Server Configuration Wizard	215
11.4.1	Enabling the ThinManager PXE Server	215
11.4.2	Network Interface Configuration.....	216
11.4.3	Network Interface Configuration for Synchronized ThinManager Servers	217
11.4.4	IP Address Range Configuration	218
11.4.5	Exclusions.....	220
11.4.6	Reservations.....	221
11.5	Terminal Group Configuration Wizard	223
11.5.2	Changing a Terminal's Group.....	227
11.5.3	Unique Group Configurations.....	231
12	Display Servers	235
12.1	Terminal Services Display Servers.....	235
12.2	Camera Configuration Wizard.....	244
12.2.2	IP Camera Group Configuration	248
12.2.3	IP Camera Administration.....	250
13	Display Clients	251
13.1	Display Client List	251
13.2	Terminal Services Display Clients	253
13.3	Camera Display Clients	264
13.3.2	Adding a Camera Overlay to a Display Client.....	276
13.3.3	Camera Overlays and TermMon ActiveX Control	279

13.4	Terminal Shadow Display Clients	280
14	Failover and Instant Failover	287
14.1	Failover Introduction	287
14.2	Failover	287
14.2.1	Failover Setup For a Terminal Using Terminal Services Display Clients 289	
14.3	Instant Failover	292
14.4	Instant Failover Configuration	295
14.4.1	Instant Failover Setup using Terminal Services Display Clients	295
14.4.2	Switching Between Instant Failover Sessions	297
14.4.3	Switching Between Sessions with Display Clients	297
14.4.4	Instant Failover Tree Icons	299
15	Modules	301
15.1	Module Overview	301
15.1.1	Module List	301
15.2	Installing a Module	304
15.3	Adding a Module to a Group or Terminal	307
15.4	Changing Module Parameters	310
15.5	Individual Module Details	313
15.6	ICA Modules	313
15.6.1	Citrix ICA UseAlternateAddress Module	313
15.6.2	Citrix ICA wfclient.ini Extension Module	314
15.7	Keyboard Modules	314
15.7.1	Key Block Module	314
15.7.2	Key Block Single Key Module	314
15.7.3	Keyboard Configuration Module	315
15.8	Local Storage Modules	316
15.8.1	USB Flash Drive Module	316
15.8.2	USB Memory Card Reader Module	317
15.9	Miscellaneous Modules	317
15.9.1	Add Serial Port	317
15.9.2	Firmware Update (Disk On Chip / Compact Flash) Update Module	317
15.9.3	Local Print Module	319
15.9.4	MultiMonitor Module	322
15.9.5	Redundant Ethernet Module	323
15.9.6	Second Network Module	323
15.9.7	Terminal Shadow Module	324
15.9.8	TermMon ActiveX Configuration Module	324
15.9.9	Terminal Shadow Module	324
15.9.10	Time Zone Redirection Module	324
15.9.11	User Override Module	325
15.10	Mouse Modules	326
15.10.1	Mouse Configuration Module	326
15.10.2	PS/2 Mouse Module	327
15.10.3	Serial Mouse Driver	327
15.10.4	Share Keyboard and Mouse Modules	327
15.11	RDP Modules	330
15.11.1	RDP Experience Module	330
15.11.2	RDP Module for ThinManager v2.4 and Older	332
15.11.3	RDP Port Module	332
15.11.4	RDP Serial Port Redirection Module	333
15.11.5	RDP Session IP Module	335

15.12	Screen Saver Modules	336
15.12.1	MultiSession Screen Saver Module	336
15.12.2	Screen Saver Module	337
15.13	Sound Modules.....	339
15.14	TermSecure Modules	340
15.14.1	RF Ideas pcProx Module	340
15.14.2	RF Ideas pcProx USB Module	341
15.14.3	TermMon ActiveX Configuration	342
15.14.4	USB Flash Drive Module	343
15.14.5	Wavetrend Tag Reader	343
15.15	Touch Screen Modules.....	344
15.15.1	USB Touch Screen Driver Module	346
15.16	Video Driver Modules	347
15.17	Advanced Modules	347
15.17.1	ICA Client Version 6.0/ ICA Client Version 8.0.....	347
15.17.2	Instant Failover Module	348
16	Citrix ICA	351
16.1	Terminals Using Display Clients with ICA.....	351
16.2	Display Client Configuration Wizard	352
16.2.2	Terminal Using Citrix and Individual Terminal Servers	354
17	Hotkeys	357
17.1	Terminal Configuration Wizard Hotkeys Display Clients	357
18	Multiple Monitors	367
18.1	Introduction to Multiple Monitors.....	367
18.2	Share Keyboard and Mouse Modules	367
18.3	MultiMonitor.....	370
19	Virtualization in ThinManager	385
19.1	Virtualization Overview	385
19.2	VCenter Servers	385
19.2.2	VCenter Server Right-Click Menus	390
19.3	Virtual Terminal Servers	393
19.4	Virtual Workstations	396
19.4.1	Workstation Display Clients.....	396
19.4.2	Terminals and Virtual Workstations.....	400
20	Scheduling	407
20.1	Terminal Schedule	407
20.2	Terminal Server Schedule	411
20.3	ThinManager Server Schedule	414
20.4	TermSecure User Schedule.....	419
21	Reports	422
21.1	Reports.....	422
21.2	Report Template Installation	422
21.3	Selecting Reports.....	424
21.4	Report Tab	425
21.5	Print Report.....	426

21.6	Scheduling Reports.....	427
21.7	Changing the Report Logo.....	433
22	WinTMC Fat Client	435
22.1	WinTMC Overview.....	435
22.2	Local WinTMC Configuration.....	435
22.3	WinTMC Configuration in ThinManager.....	438
22.3.2	MultiMonitor WinTMC.....	442
22.3.3	WinTMC Modules.....	442
22.3.4	WinTMC Licensing.....	443
23	Shadowing	445
23.1	ThinManager Shadow.....	445
23.1.1	Shadow Access.....	446
23.1.2	Configure Shadowing.....	447
23.1.3	Shadow Keystrokes.....	448
23.1.4	Terminal-to-Terminal Shadowing.....	448
24	ThinManager Security	455
24.1	ThinManager Security Groups.....	455
24.2	ThinManager Server Security.....	458
24.2.1	Windows Security.....	460
25	TermSecure	462
25.1	TermSecure Overview.....	462
25.2	Users Types.....	462
25.2.1	Windows Users.....	463
25.2.2	TermSecure Users.....	463
25.2.3	ThinManager Security Group Users.....	463
25.3	Deploying TermSecure.....	463
26	Permissions	465
26.1	Creating Permissions Groups.....	465
26.2	Permission Groups for Terminals.....	467
26.3	Permission Groups for Display Clients.....	469
26.4	Permission Groups for TermSecure Users.....	471
26.5	Shortcut Method of Adding TermSecure Access Groups.....	477
26.6	TermSecure User Configuration Wizard.....	481
26.7	TermSecure Users Group Configuration Wizard.....	497
26.8	Adding a TermSecure User to the TermSecure User Group.....	500
26.9	TermSecure Login.....	504
26.9.1	Logging Out.....	506
26.10	TermSecure Menu.....	507
26.11	Card and Badge Configuration for a TermSecure User.....	512
26.11.1	Automatic Card/Badge ID Number Entry.....	513
26.11.2	Manual Card/Badge ID Number Entry.....	519
27	TermMon ActiveX Control	525
27.1	Registering the Control.....	525
27.2	Using the Control.....	525
27.2.1	TermMon ActiveX Configuration Module.....	525

27.2.2	Read-Only Properties	525
27.2.3	Read-Write Properties	526
27.2.4	Events.....	526
27.2.5	Methods.....	527
27.2.6	Control Constants.....	531
27.3	TermMon ActiveX Demo Application	532
28	Non-ThinManager Components	535
28.1	Server 2003.....	535
28.1.1	Installing Terminal Services.....	535
28.2	Creating Microsoft User Profiles	537
28.3	Software Installation On Windows 2003	539
28.3.1	Terminal Services Configuration	543
28.3.2	Terminal Services Connections.....	543
28.3.3	Terminal Services Connections.....	550
28.3.4	Licensing Mode	550
28.3.5	Permission Compatibility	551
28.3.6	Restrict Each User to a Single Session.....	552
28.3.7	License Server Discovery Mode.....	552
28.4	Windows 2008 Server.....	553
28.4.1	Adding Terminal Server Role	553
28.4.2	Adding Applications in Windows 2008	559
28.4.3	Create Users	559
28.4.4	Allowing Application Access	560
28.4.5	Installing ThinManager	563
28.4.6	Allow Inbound Traffic to Firewall.....	565
28.4.7	Local Security Policy – User Access Controls.....	573
28.5	Command Prompt.....	574
28.6	Alternative Terminal Keystrokes	575
28.7	DHCP Server Setup.....	576
28.8	Group Policy.....	577
28.9	Microsoft Licenses	578
28.9.1	Microsoft Client Access Licenses (CALs).....	578
28.9.2	Microsoft Terminal Server Licenses	579
28.9.3	Microsoft Terminal Server Licensing Activation	579
29	ThinManager Troubleshooting Guide	581
29.1	Section 1 - From Power on to Terminal Server Login	581
29.2	Section 2 - Thin Client is Booted, Connected, and Running a Session on the Terminal Server.....	584
30	Glossary of Terms	587
31	Index	592